

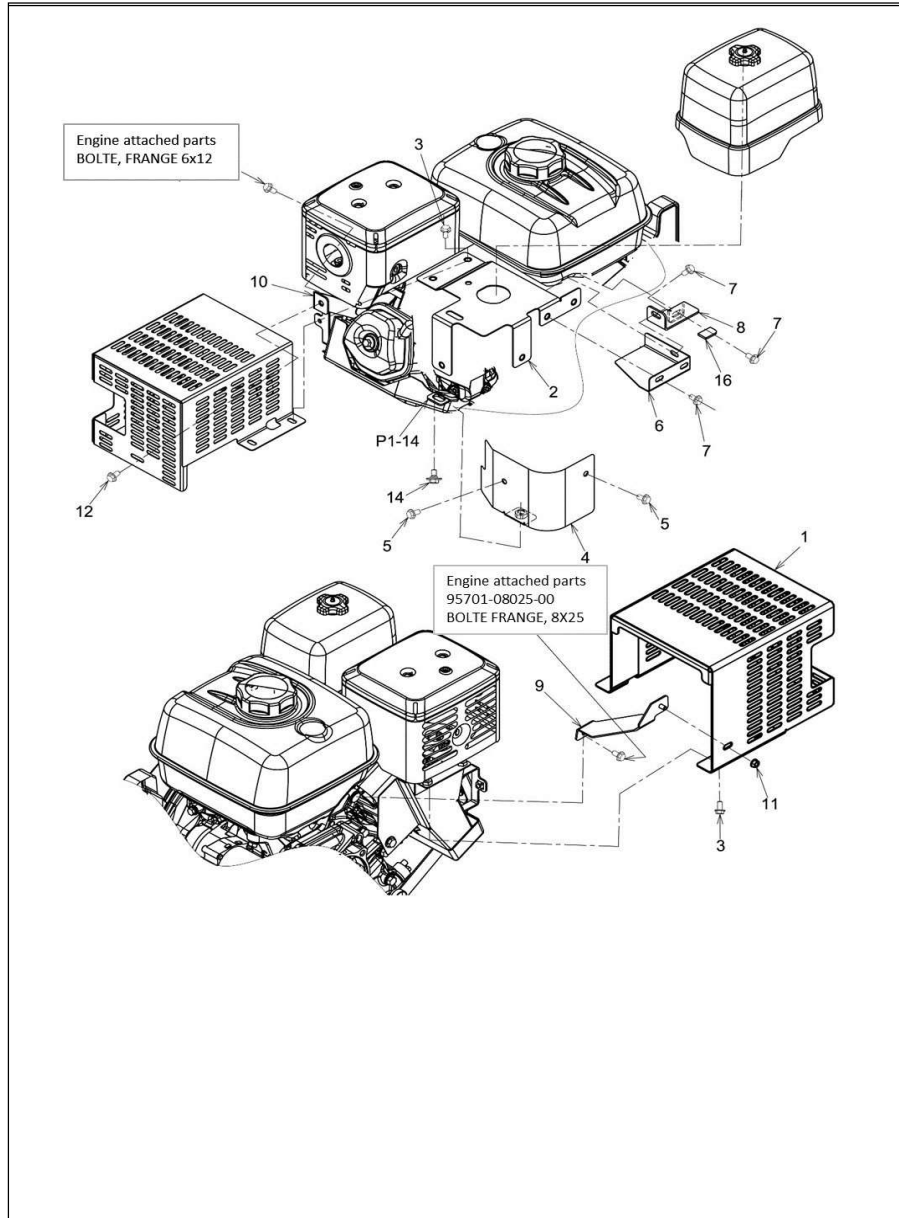
Engine attached parts
BOLTE FRANGE, 6x12


Diagram illustrating the assembly of the engine (1) onto the base (30) using various components and fasteners:

- 1: Engine
- 7: Bolt
- 8: Bolt
- 10: Flange
- 11: Bolt
- 14: Bracket
- 15: Bolt
- 16: Bolt
- 19: Bracket
- 20: Bolt
- 22: Bracket
- 23: Bolt
- 24: Bolt
- 25: Bolt
- 26: Bolt
- 28: Bolt
- 30: Base
- 31: Bolt
- 32: Bolt


No.	Parts No.	Name	Quantity	Note
1	01007-B96-000	ENGINE, GX390T2-SED4	1	
2				
3				
4				
5				
6				
7	91911-02	PETROL (GASOLINE)	1.6 ℓ	
8	91921-05306	OIL 5W30, ENGINE	1.1 ℓ	
9				
10	02901-B96-030	COVER, RECOIL	1	
11	48911-B96-001	BOLT, SPECIAL 6×9S	3	
12				
13				
14	02902-B96-000	COVER A, ENGINE	1	
15	48905-B96-000	BOLT, SPECIAL 6×9	1	
16	48912-B96-000	BOLT, SPECIAL 8×14	1	
17				
18				
19	09200-B96-002	COVER B COMP,ENGINE	1	
20	93100-0801617	BOLT, FLANGE 8×16	1	
21				
22	02700-B96-801	STAY L COMP, COVER	1	
23	02800-B96-803	STAY R COMP, COVER	1	～No.203000
24	93100-0601617	BOLT, FLANGE 6×16	2	
25	93100-0601617	BOLT, FLANGE 6×16	2	～No.203000
26	08905-B96-800	STAY, HARNESS	1	
27	-	-		
28	91314-11765	STRAP, CABLE 1-1765	2	
29				
30	02100-B96-051	BASE COMP, ENGINE	1	～No.203000
	02200-BA2-000	BASE COMP, ENGINE (1070	1	No.203001～
31	94006-10410	NUT, FLANGE 10×1.25	5	
32	91314-119P7	STRAP, CABLE 1-19P7	2	
33	91382-0500801	CORRUGATE 5×80	1	～No.203000
	91382-0701701	CORRUGATE 7×170	1	No.203001～

SXC1070HE

[illegible]

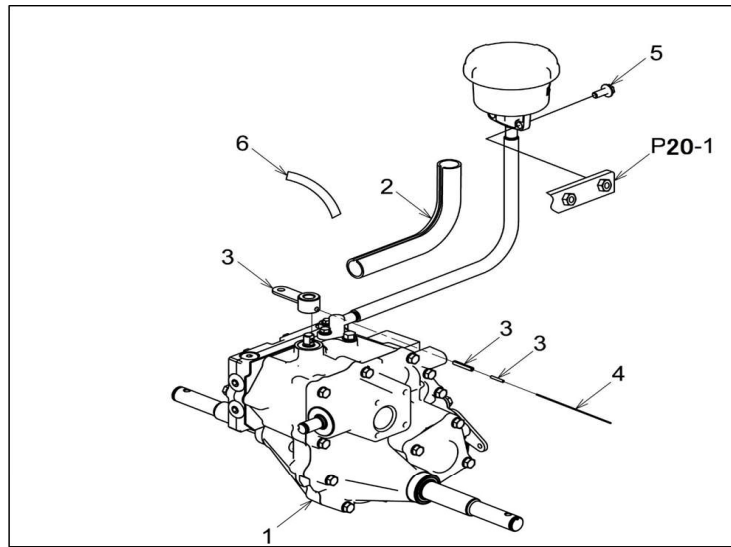


10002-B90-000
LEVER KIT, HST

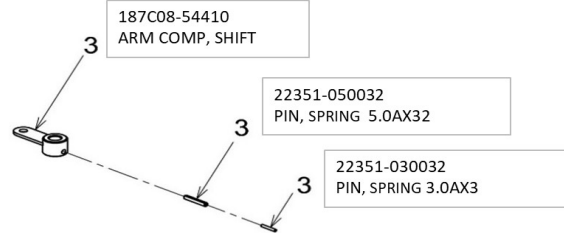

Up to Serial No.203000

[illegible]

[illegible]

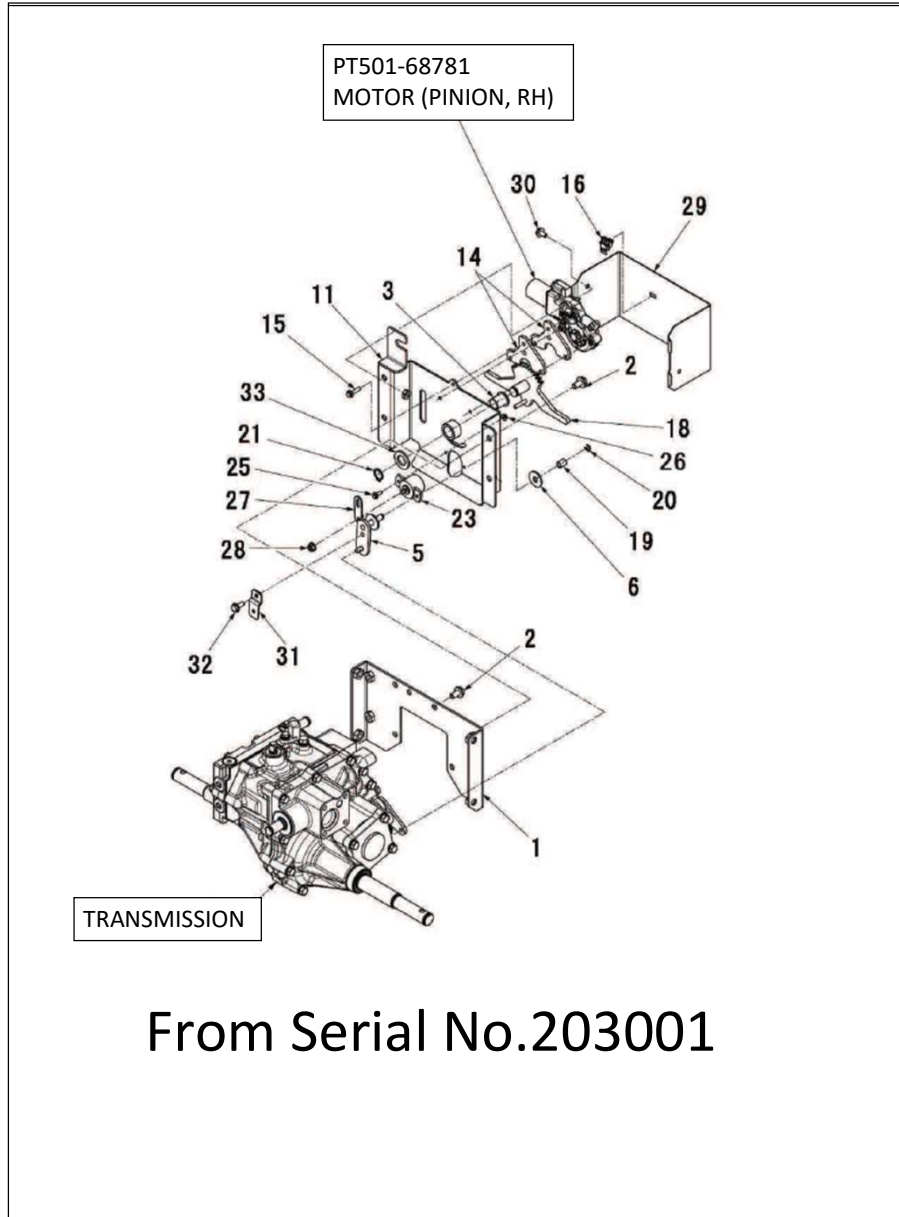


No.	Parts No.	Name	Quantity	Note
1	12100-BA2-800	BASE COMP, MISSION	1	No.203001～
2	93100-0801617	BOLT, FLANGE 8×16	9	
3	91644-162080	BUSH, 80F-1620	1	No.203001～
4				
5	12400-BA2-801	ARM COMP, BRAKE	2	No.203001～
6	91251-0835231	WASHER, RD 8×35×2.3	2	No.203001～
7				
8				
9				
10				
11	12300-BA2-801	BRACKET COMP, MOTER	1	No.203001～
12				
13				
14	33909-B96-802	SPACER B	2	
15	91274-0502011	BOLT, SPECIAL 5×20	3	
16	81901-BA2-000	CLIP, COUPLER WPC	1	No.203001～
17	-	-		
18	12600-BA2-800	GEAR COMP	1	No.203001～
19	12901-BA2-000	COLLAR 8.2×10×12	2	No.203001～
20	94511-06080	RING E, 6	2	No.203001～
21	94510-16080	CIRCLIP, EX 16	1	No.203001～
22				
23	83100-B89-001	SENSOR, ANGLE RPA211	1	
24				
25	83902-B89-000	BOLT, SPECIAL 4×12	2	
26	94002-04410	NUT, FLANGE 4	2	
27	89301-BA2-800	STAY, SIDE CLUTCH	1	No.203001～
28	94002-06410	NUT, FLANGE 6	1	
29	18901-BA2-801	COVER, SIDE CLUTCH	1	No.203001～
30	93100-0601217	BOLT, FLANGE 6×12	2	No.203001～
31	12902-BA2-801	PLATE, STOPPER	2	No.203001～
32	93100-0601617	BOLT, FLANGE 6×16	2	
33	94101-16010	WASHER, PLAIN 16	1	No.203001～

SXC1070HE


[illegible]

SXC1070HE

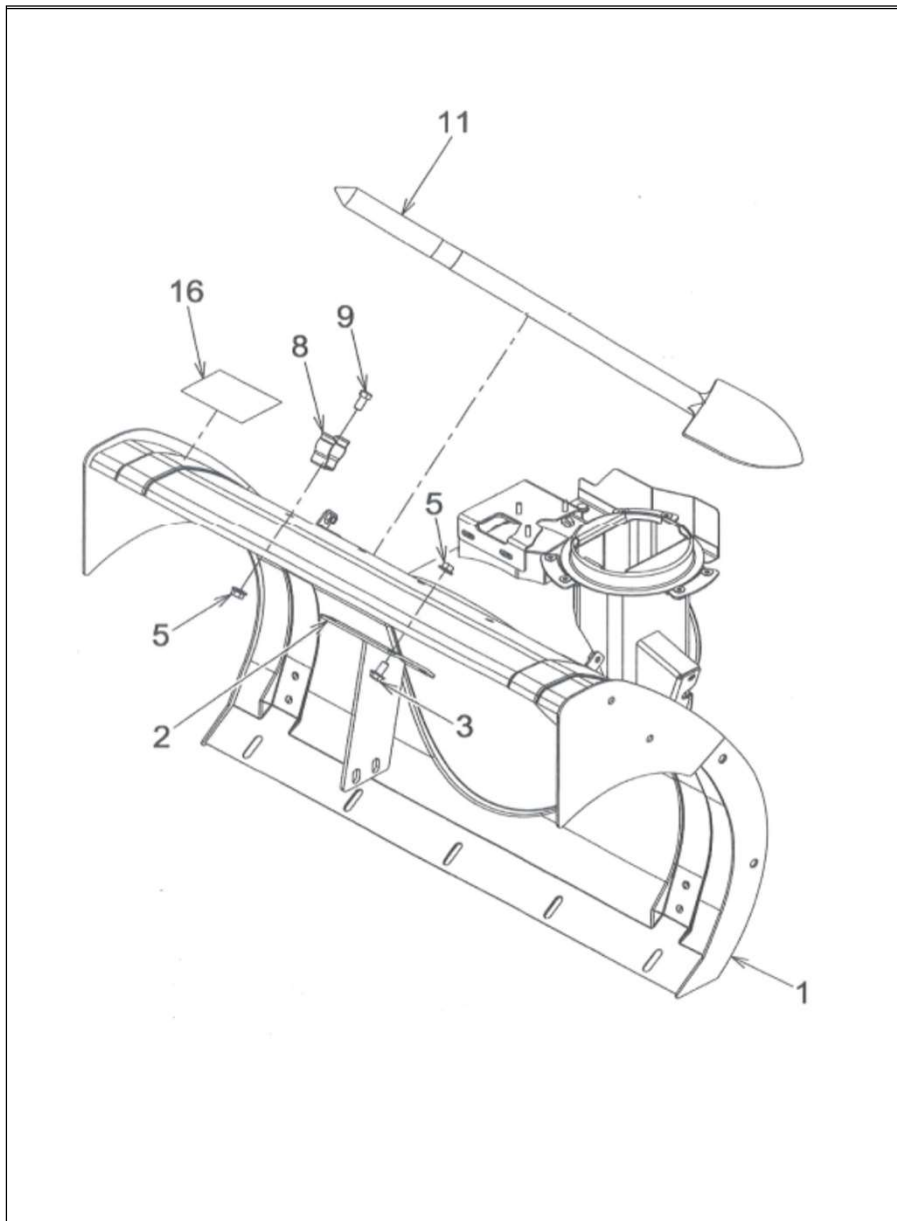


SXC1070HE

[illegible]

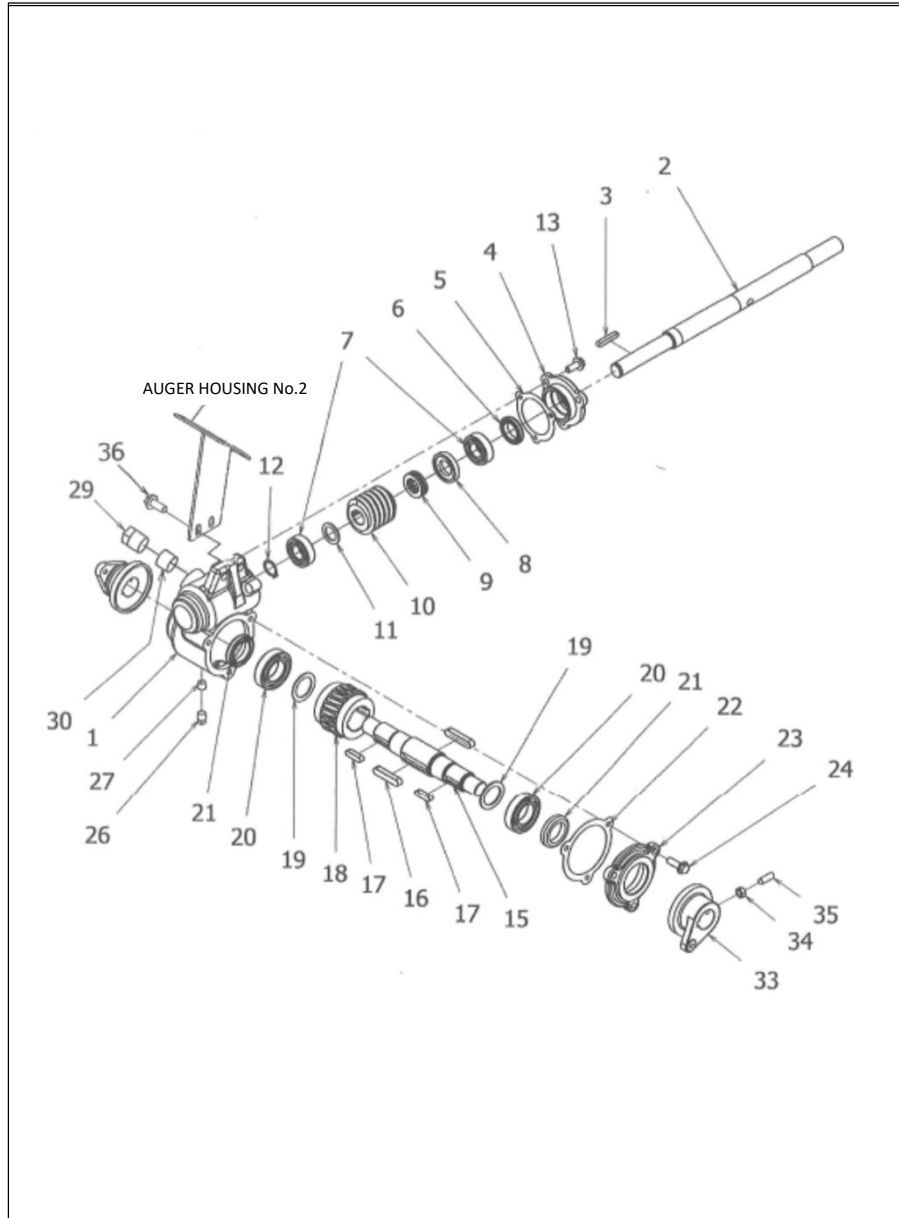



No.	Parts No.	Name	Quantity	Note
1	34901-B01-700	CASE, AUGER GEAR	1	
2	34901-B96-700	SHAFT, BLOWER	1	
3	97113-038241	KEY, 6 × 6 × 38RR	1	
4	31904-A31-701	COVER A, AUGER GEAR CASE	1	
5	39901-A31-002	PACKING A, AUGER GEAR CASE	1	
6	98251-2503807	SEAL, OIL D25387	1	
7	96100-06004	BEARING, 6004	2	
8	32904-A31-001	COLLAR, THRUST	1	
9	96200-051104	BEARING, 51104	1	
10	73251-V15-F002	GEAR, DRIVE	1	
11	91912-A05-001	WASHER, RD 20 × 30 × 2	1	
12	94510-20080	CIRCLIP, EX 20	1	
13	93100-0802017	BOLT, FLANGE 8 × 20	3	
14				
15	34902-B96-000	SHAFT, AUGER	1	
16	97116-048241	KEY, 10 × 8 × 48RR	2	
17	97115-028241	KEY, 8 × 7 × 28RR	2	
18	32902-A90-000	WORM WHEEL, M3 × 20	1	
19	91302-A31-000	WASHER, RD 30 × 42 × 2	2	
20	96100-06006	BEARING, 6006	2	
21	98251-3004508	SEAL, OIL D30458	2	
22	39902-A31-002	PACKING B, AUGER GEAR CASE	1	
23	31905-A31-700	COVER B, AUGER GEAR CASE	1	
24	93100-0802517	BOLT, FLANGE 8 × 25	3	
25				
26	91555-0141	PLUG, PT1/8	1	
27	91941-050	TAPE 50	1	
28				
29	91555-0641	PLUG, PT3/4	1	
30	91941-150	TAPE 150	1	
31	91931-090	OIL #90, GEAR	0.2 ℓ	
32				
33	35901-B96-800	SHARE FLANGE ,AUGER	2	
34	94003-08412	NUT, SPECIAL 8	2	
35	91221-082540	BOLT, SPECIAL 8 × 25	2	
36	93300-1002517	BOLT, FLANGE 10 × 1.25 × 25	2	

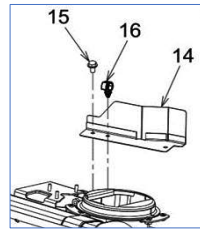

SXC1070HE

[illegible]

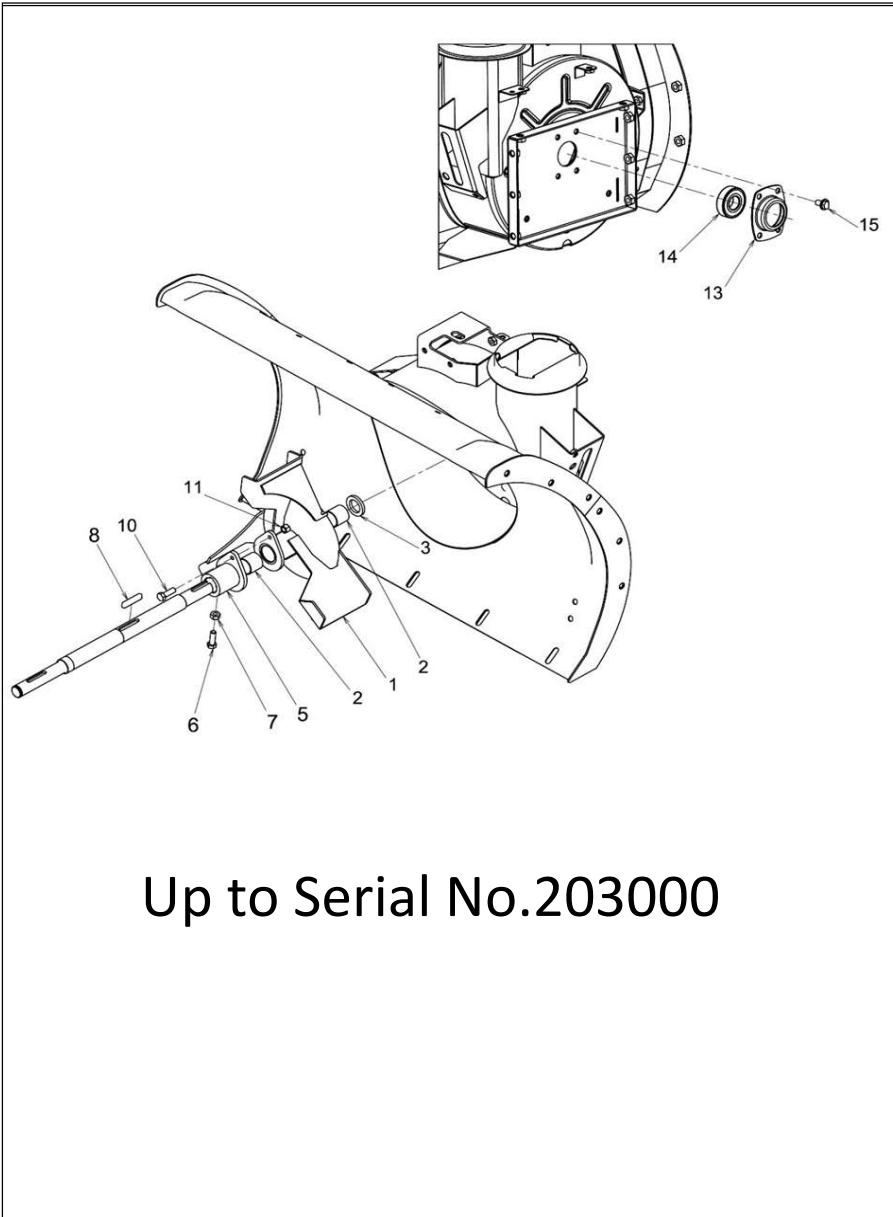[illegible]

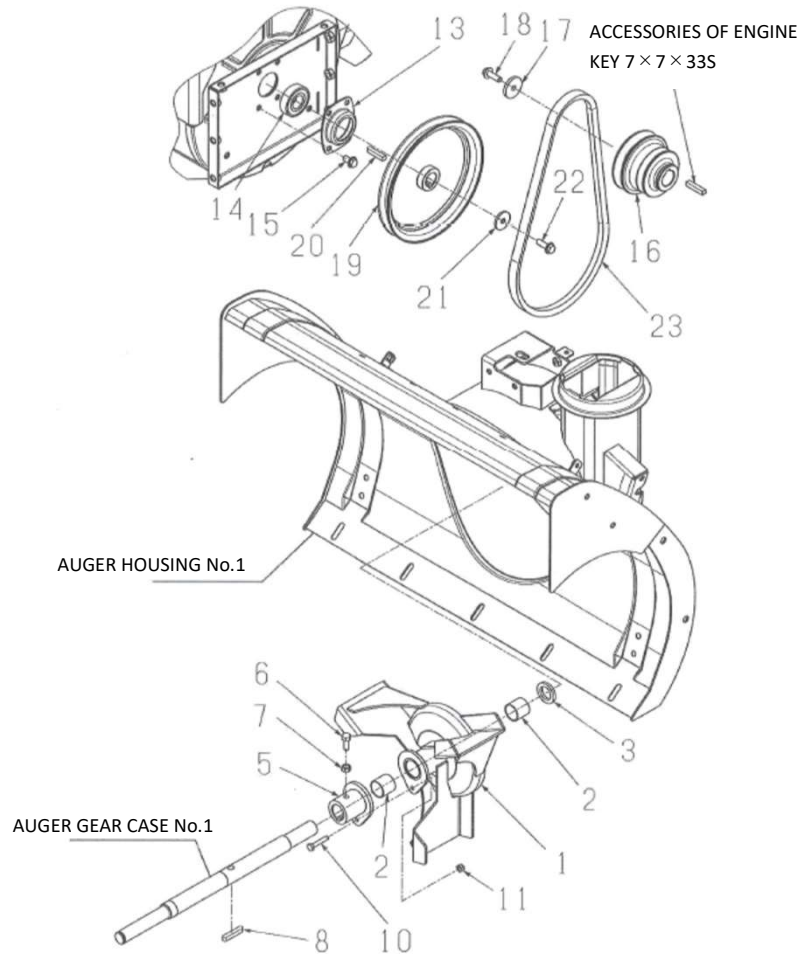


From Serial No.203001

[illegible]

WADO CO., LTD

AUGER

SXC1070HE

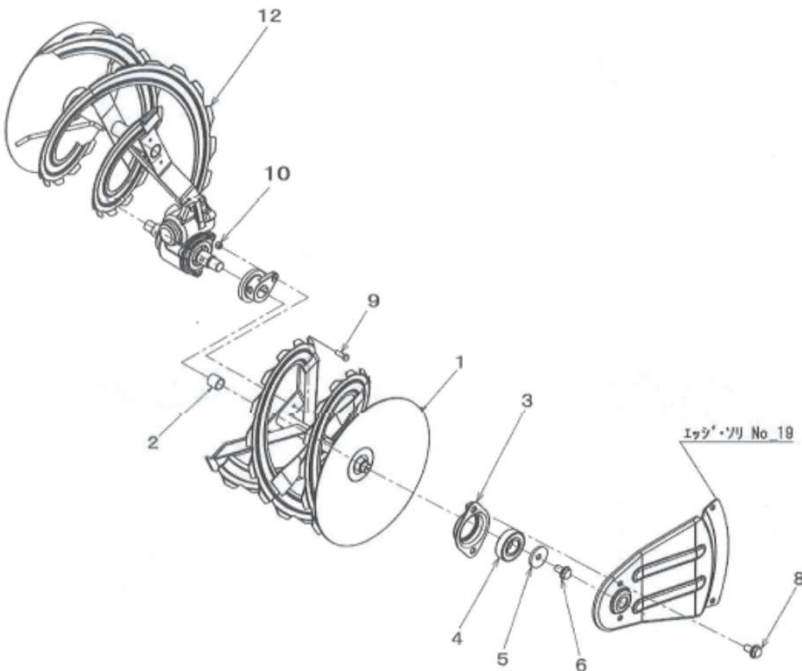

 
WADO CO., LTD

AUGER

SXC1070HF

[illegible]

SXC1070HE




SXC1070HE


[illegible]


P28-10
5K126-71921
MOTOR (PINION, LH)

P28-10
5H687-52493
COVER, MOTOR

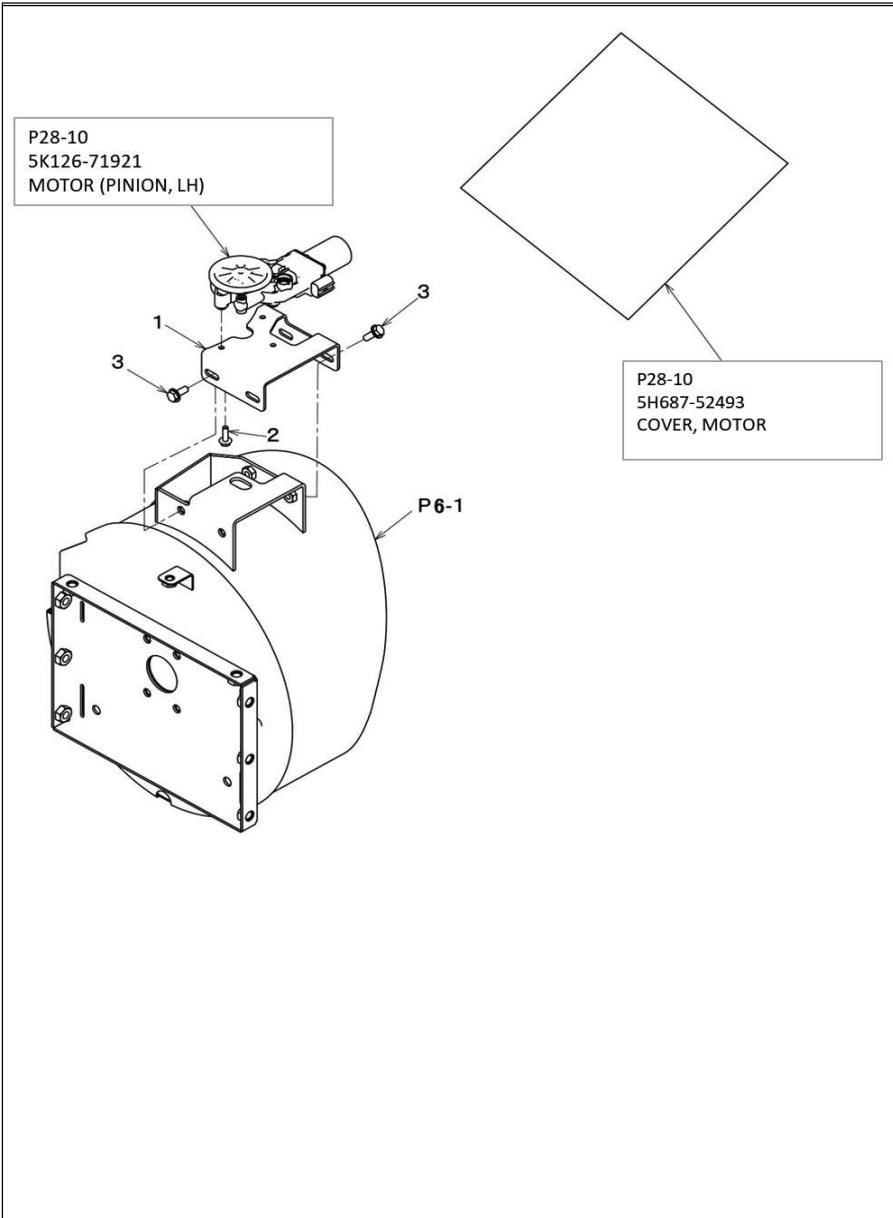


[illegible]

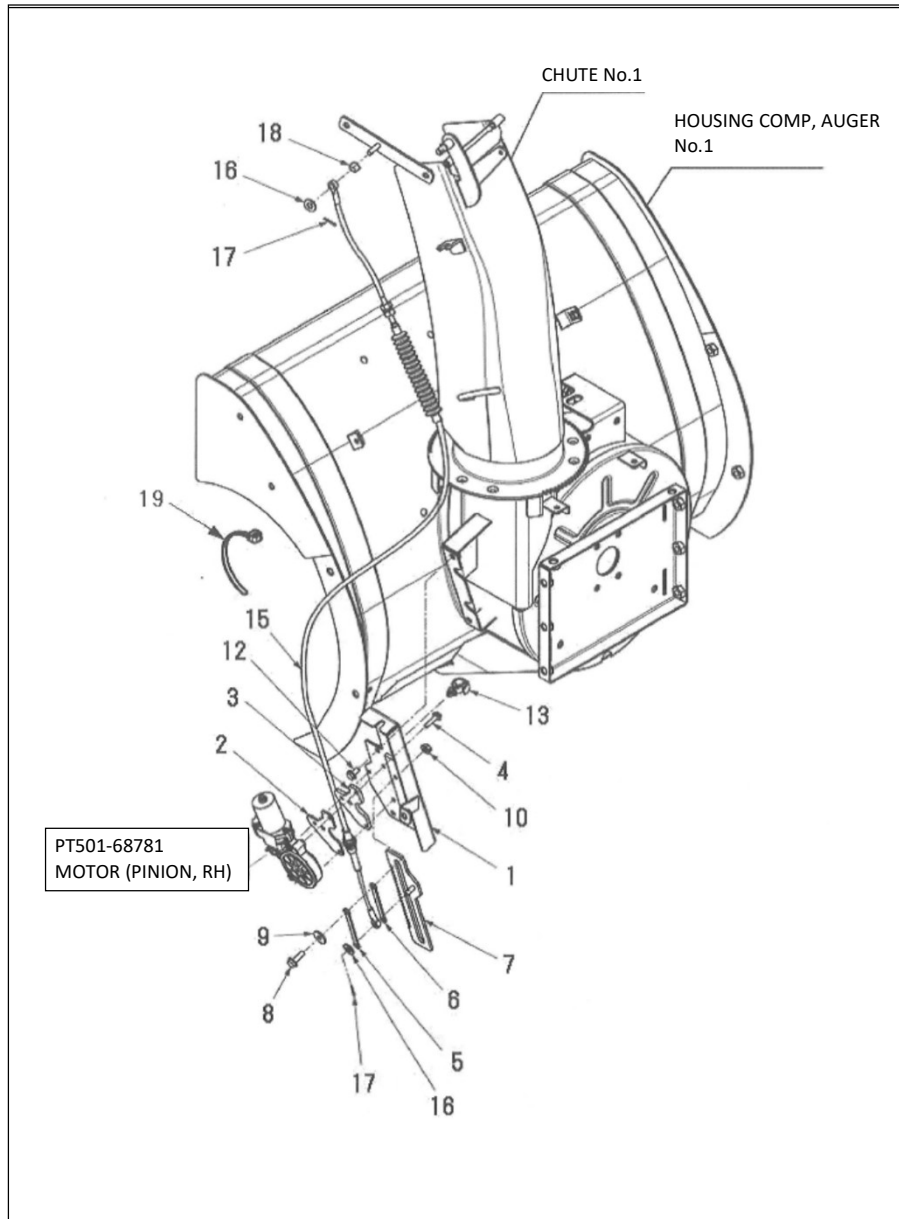[illegible]

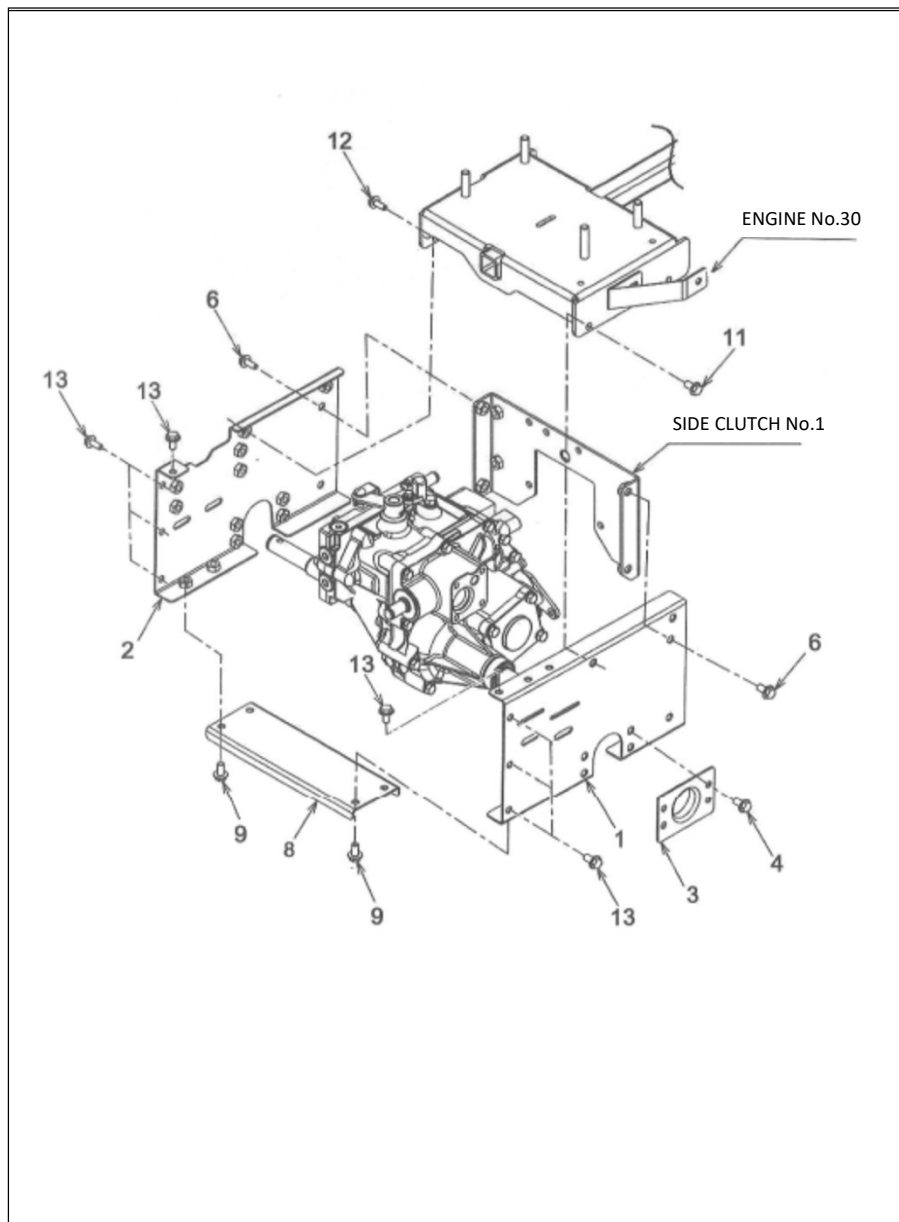
[illegible]


SXC1070HE

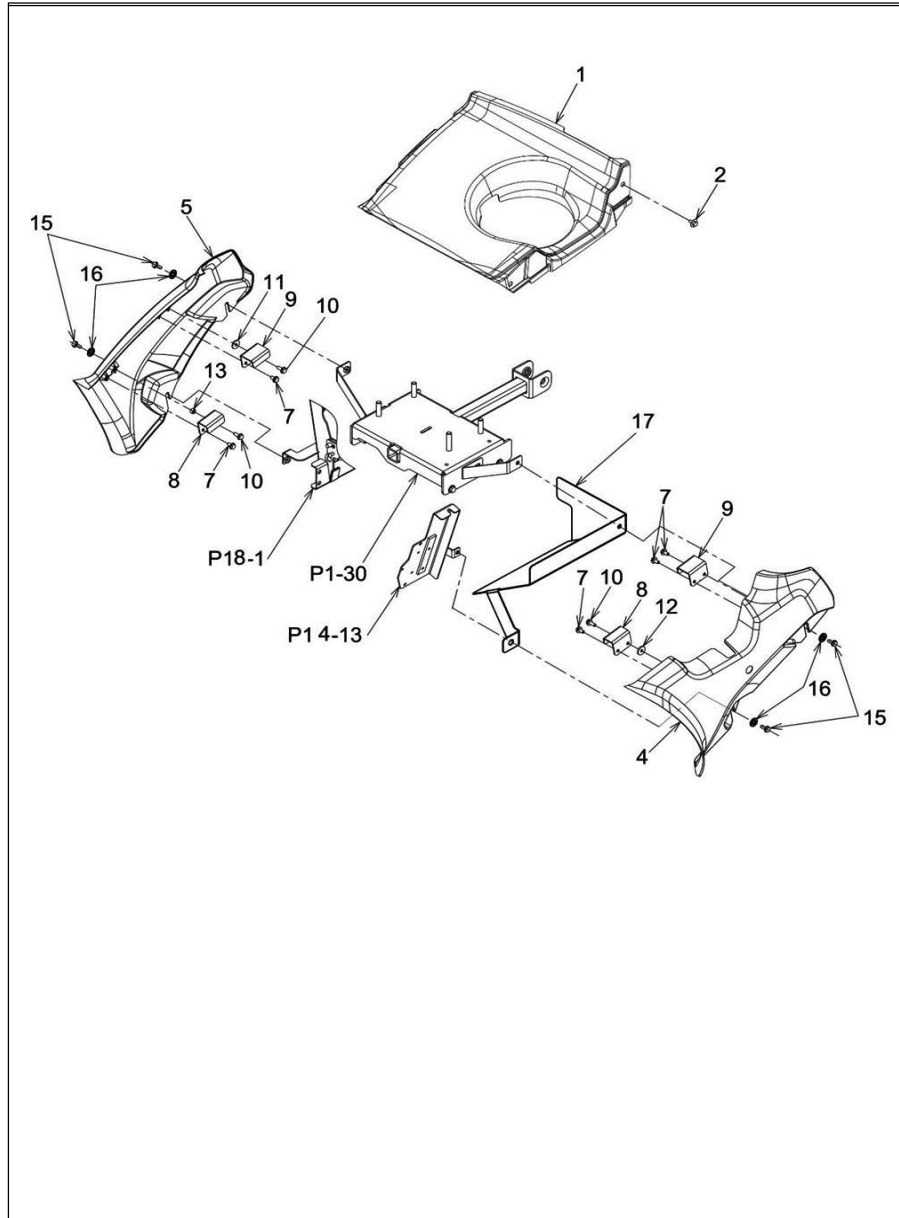


SXC1070HE


[illegible]

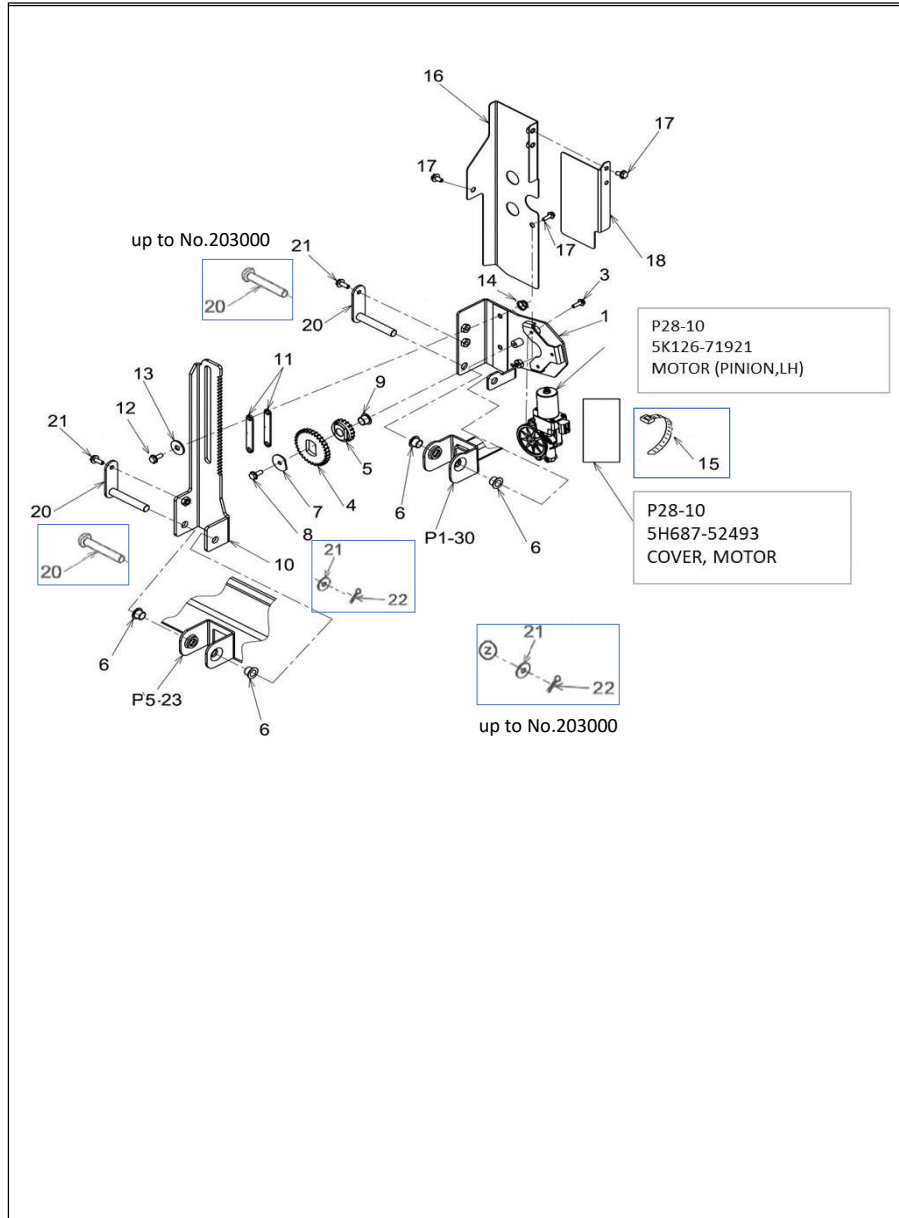[illegible]

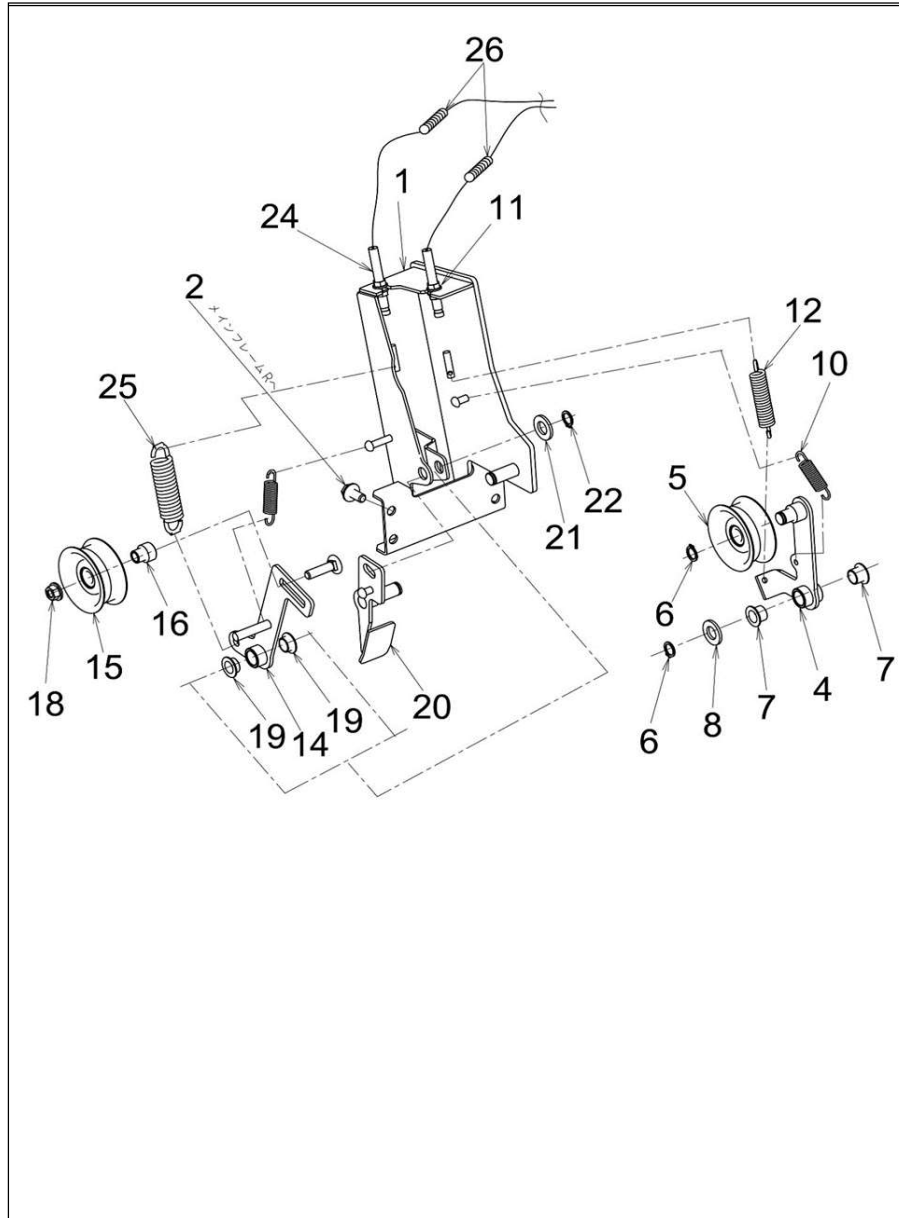[illegible]

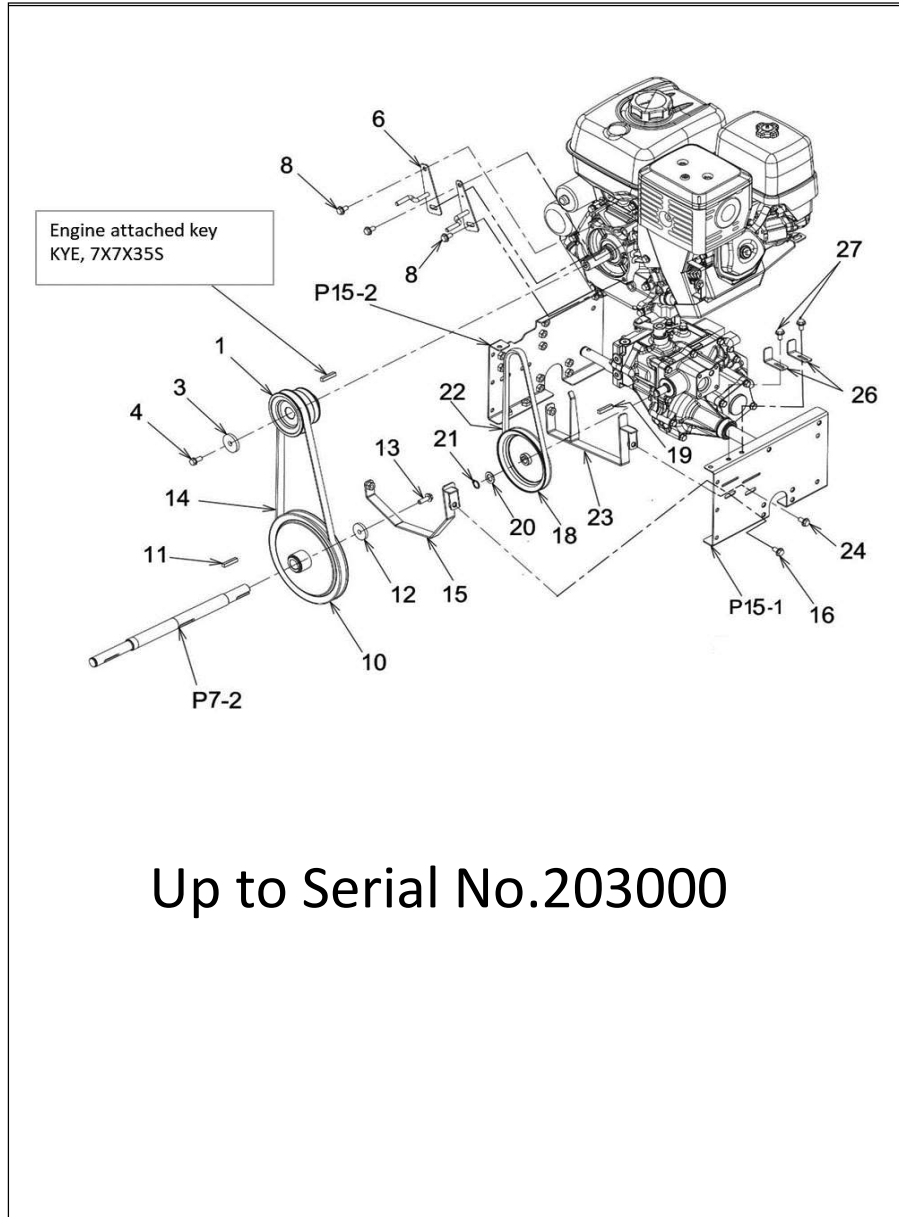
[illegible]

[illegible]

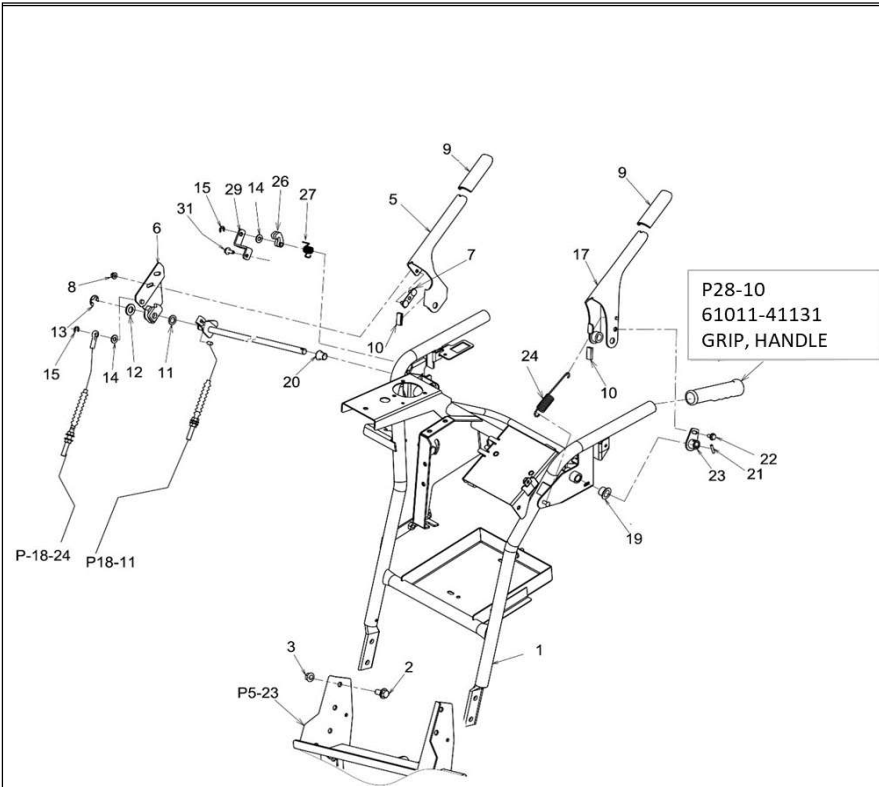



Up to Serial No.203000



[illegible]

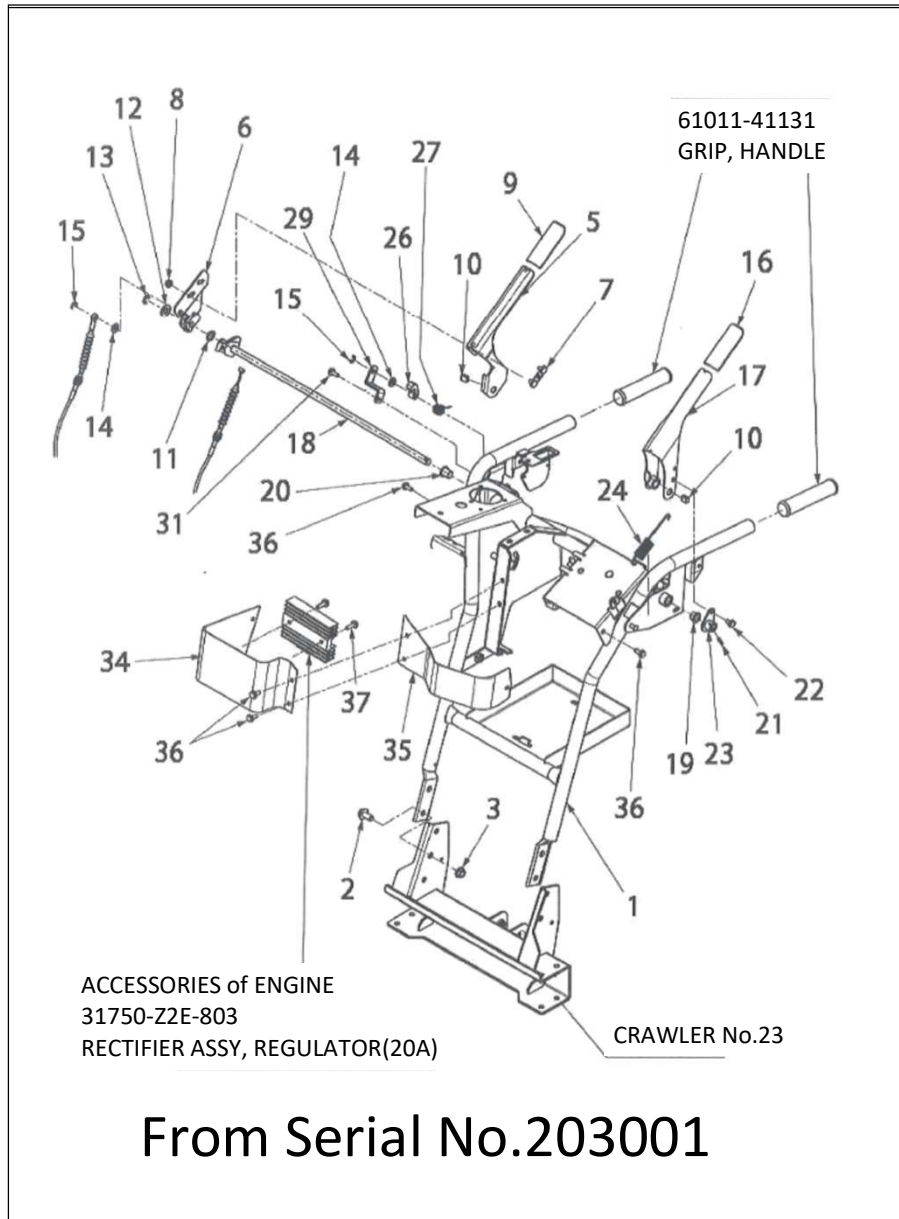

No.	Parts No.	Name	Quantity	Note
1	71100-BA2-601	HANDLE COMP (1070	1	No.203001~
2	93300-1002017	BOLT, FLANGE 10×1.25×20	4	
3	94006-10410	NUT, FLANGE 10×1.25	4	
4				
5	73600-B96-801	LEVER COMP, AUGER CLUTCH	1	
6	73400-B96-832	BRACKET COMP, AUGER CLUTCH	1	
7	76500-B96-801	PLATE COMP, SET	1	
8	94002-06410	NUT, FLANGE 6	2	
9	73901-B96-001	COVER, DIPPING	1	
10	71909-B96-000	RUBBER 12×10	2	
11	73903-B96-000	SHIM 12×20×1.2	1	
12	94101-12010	WASHER, PLAIN 12	1	
13	94511-09010	RING E, 9	1	
14	94101-08010	WASHER, PLAIN 8	2	
15	94511-07010	RING E, 7	2	
16	73901-B96-001	COVER, DIPPING	1	
17	73500-B96-833	LEVER COMP, DRIVE CLUTCH	1	
18	76400-B96-806	SHAFT COMP	1	
19	91644-121080	BUSH, 80F-1210	1	
20	91644-121580	BUSH, 80F-1215	1	
21	94319-40020	PIN, SPG 4×20	1	
22	93100-0601217	BOLT, FLANGE 6×12	1	
23	74100-B96-832	BOSS COMP, JOINT	1	
24	71905-B96-101	SPRING, CLUTCH LEVER	1	
25				
26	73905-BA2-000	CAM	1	No.203001~
27	71901-B96-001	SPRING	1	
28				
29	78903-B96-801	STAY	1	
30				
31	93100-0601617	BOLT, FLANGE 6×16	1	
32				
33	-	-		
34	78300-B96-802	COVER A COMP, FRONT	1	
35	78908-B96-832	COVER B, FRONT	1	
36	93100-0601257	BOLT, FLANGE 6×12	4	
37	93100-0602017	BOLT, FLANGE 6×20	2	

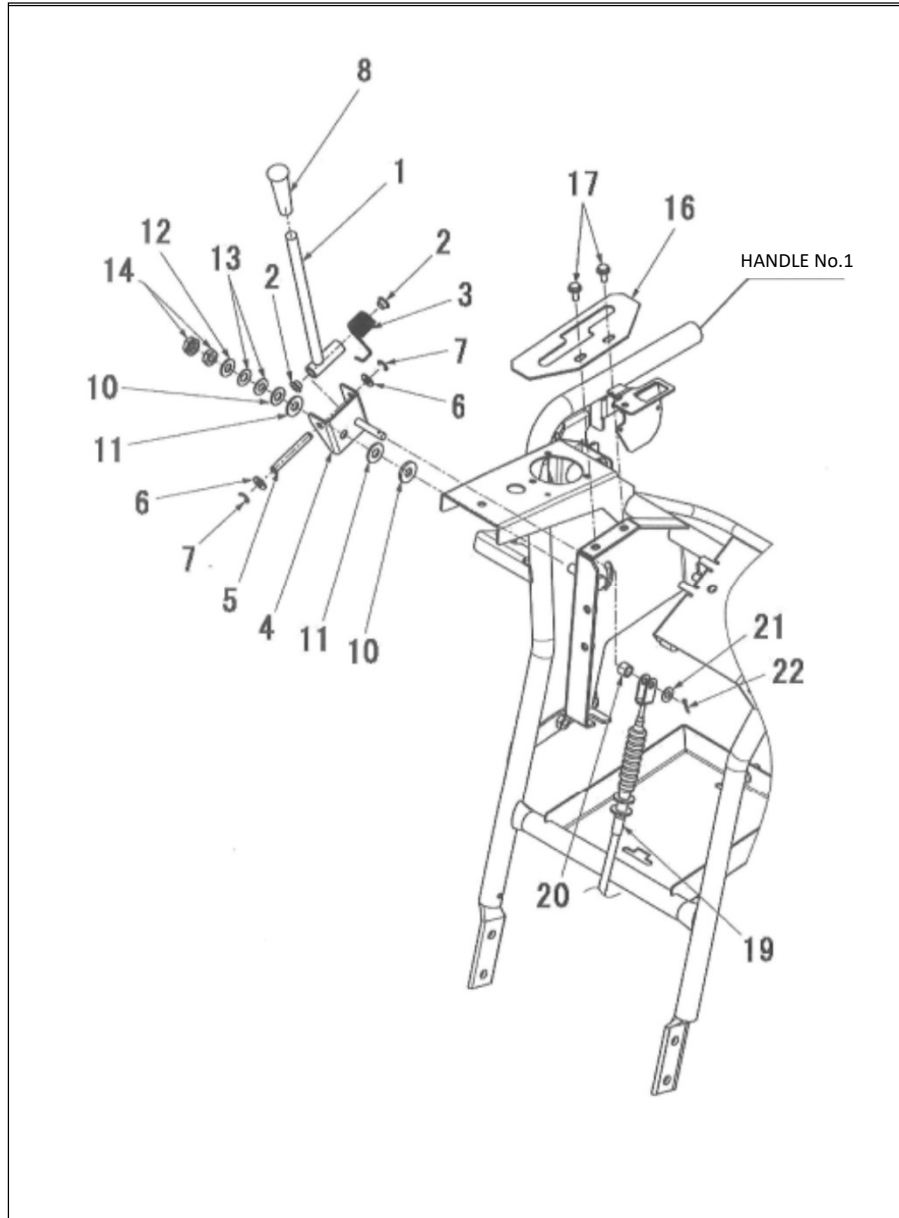
[illegible]

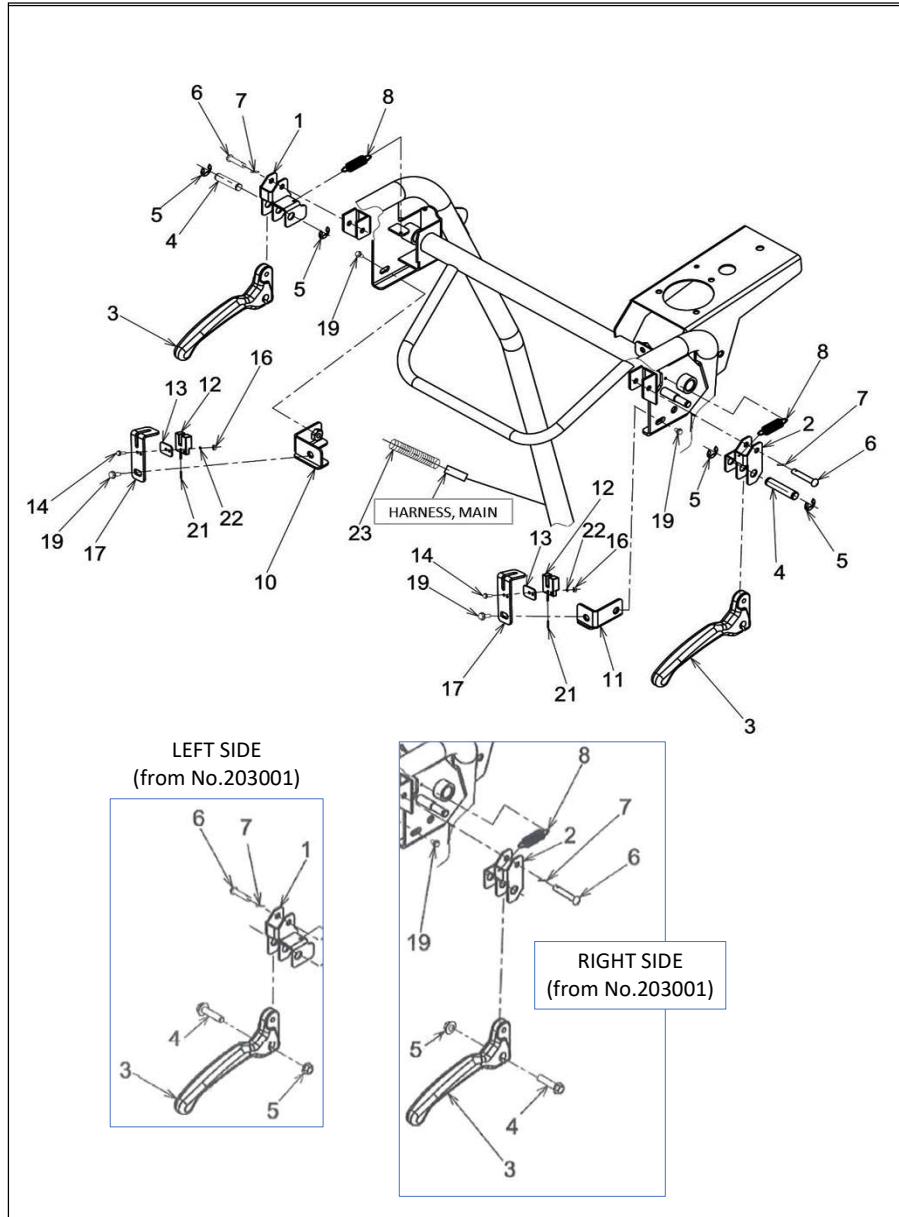[illegible]

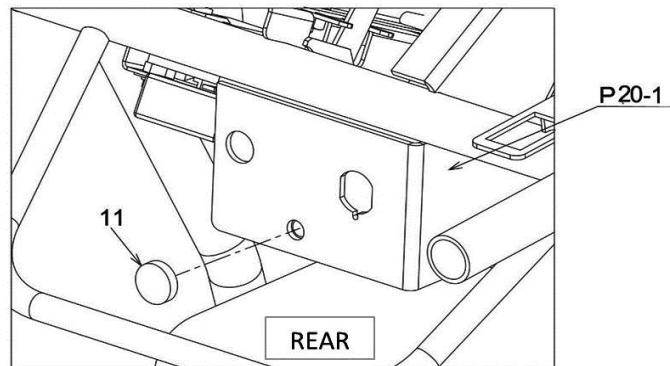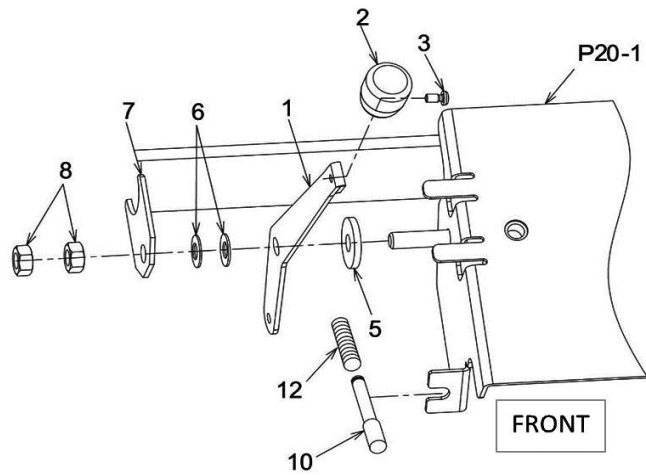[illegible]


[illegible]

[illegible]

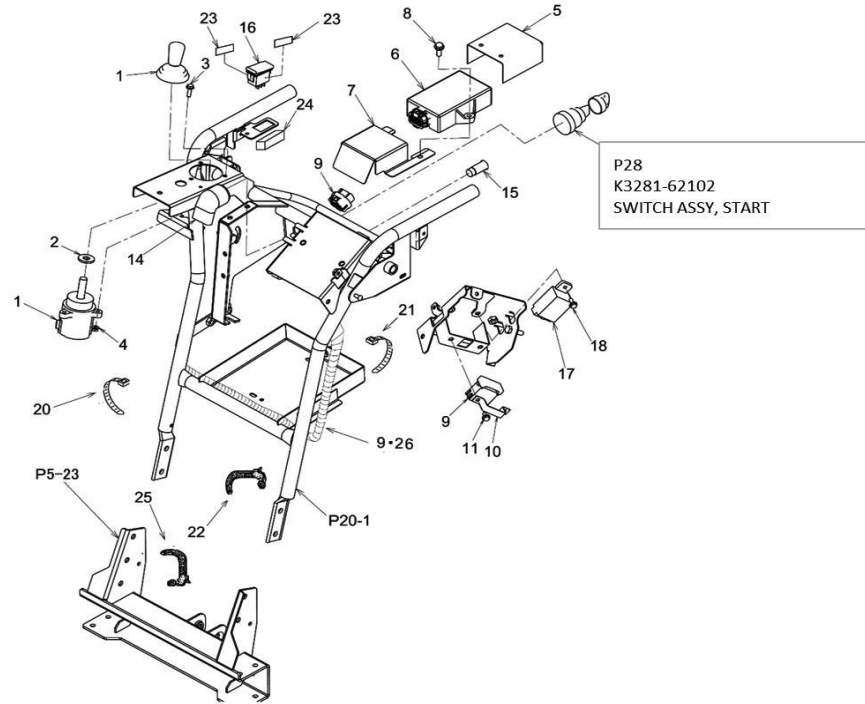


Up to Serial No.203000

[illegible]

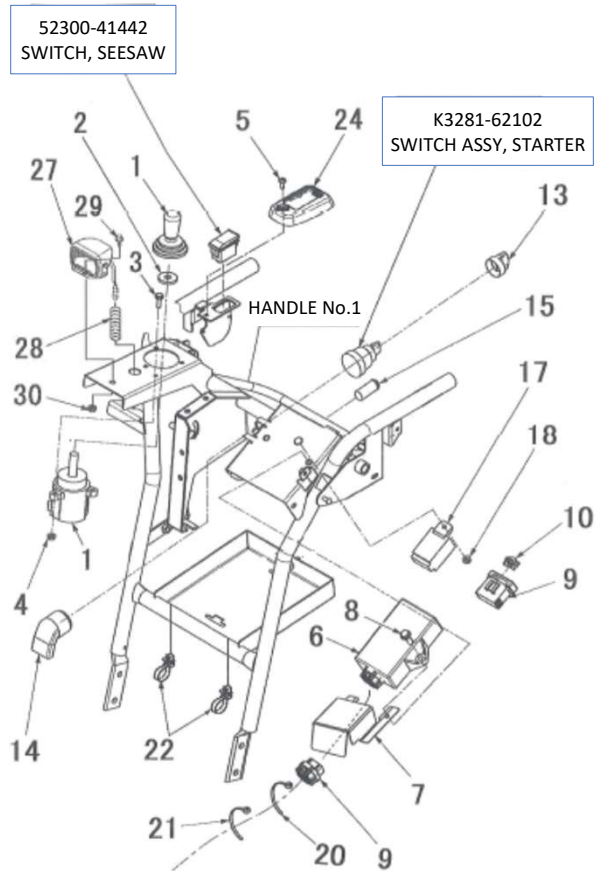

From Serial No.203001

 
[illegible]

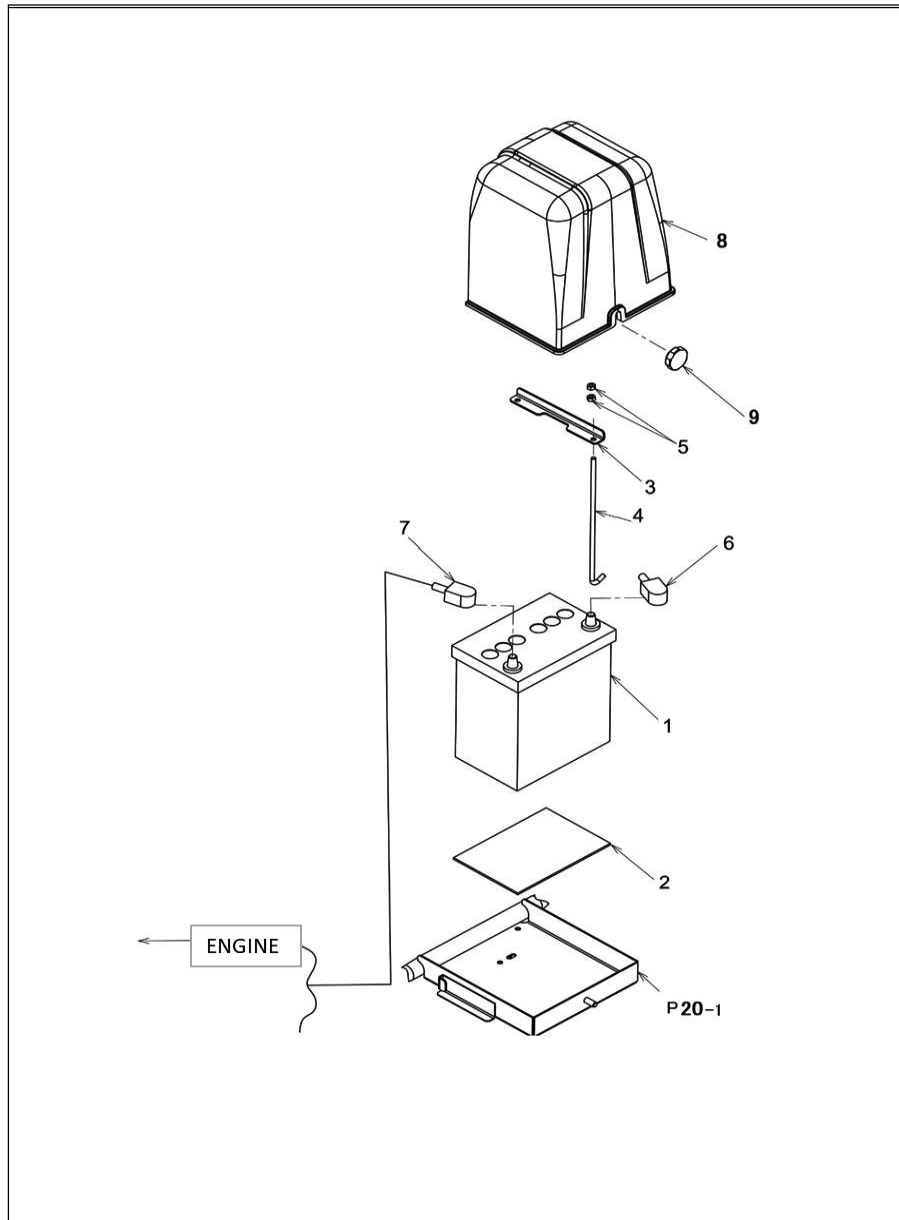[illegible]

This exploded view diagram illustrates the assembly of a snowblower. The main components are shown in their relative positions: the engine and drive shaft assembly at the top, the auger and impeller assembly at the bottom, and the chassis with skis and tracks in the middle. Numbered callouts (1-24) identify specific parts and their assembly points. Callouts 1-10 are located on the upper left, 11-16 on the upper right, 17-20 on the middle right, 21-24 on the lower left, and 13-14 on the lower right. The diagram uses solid lines for the main components and dashed lines to indicate the assembly path for the smaller parts.

WADO CO., LTD
LABEL

[illegible]

[illegible]